COOKTOP PARTS

For Models: RF368LXKW0, RF368LXKQ0, RF368LXKP0, RF368LXKT0, RF368LXKB0, RF368LXKV0
(White)(Designer White)(White on White)(Designer Biscuit)(Black) (Biscuit)

30" ELECTRIC CERAN
FREESTANDING RANGE
SELF CLEAN OVEN

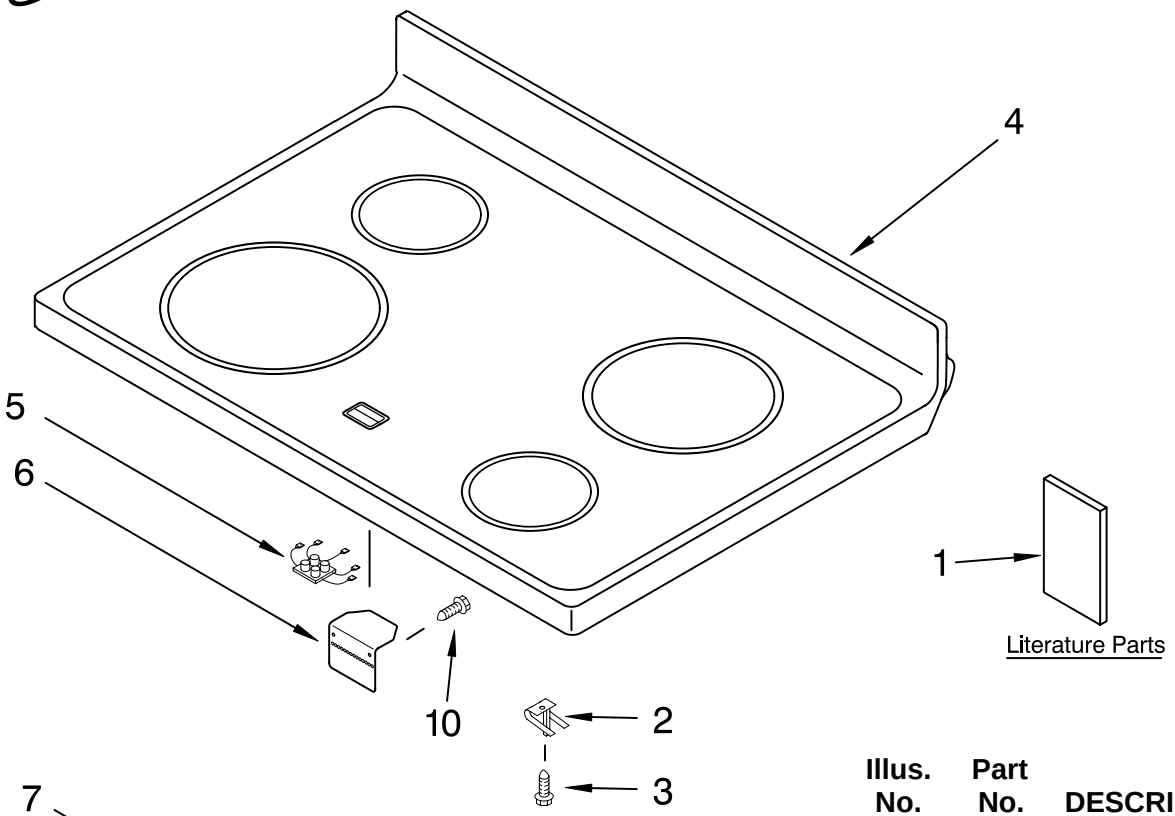

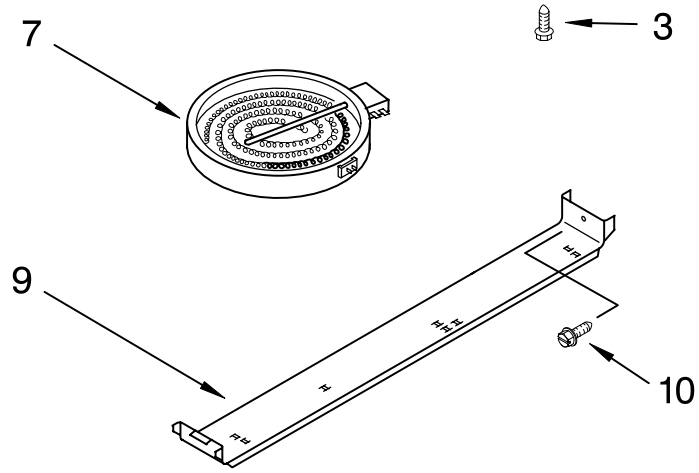

Illus. No.	Part No.	DESCRIPTION
1		Literature
	LIT8053714	Instructions, Installation
	LIT8523048	Installation Instructions (Templet)
	LIT8522771	Guide,Use & Care
	LIT8053296	Tech Sheet
	LIT3191638	Safer Cooking Tips
2	3149191	Spring, Locator
3	3196170	Screw
4		Cooktop
	8053541	White (W Model)
	8053543	White (Q Model)
	8522585	White(P Model)
	8272513	Biscuit(T Model)
	9755837	Biscuit(V Model)
	8053545	Black (B Model)
5	8274173	Light, Indicator (Hot Surface)
6	3195810	Bracket, Ind Light
7		Element, Surface
	8273992	2500 W − LF
	8273994	1200 W − LR
	8273993	1800 W − RR
	8273994	1200 W − RF
9	3196455	Bracket, Element
10	3196169	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: RF368LXKW0, RF368LXKQ0, RF368LXKP0, RF368LXKT0, RF368LXKB0, RF368LXKV0
(White)(Designer White)(White on White)(Designer Biscuit)(Black) (Biscuit)

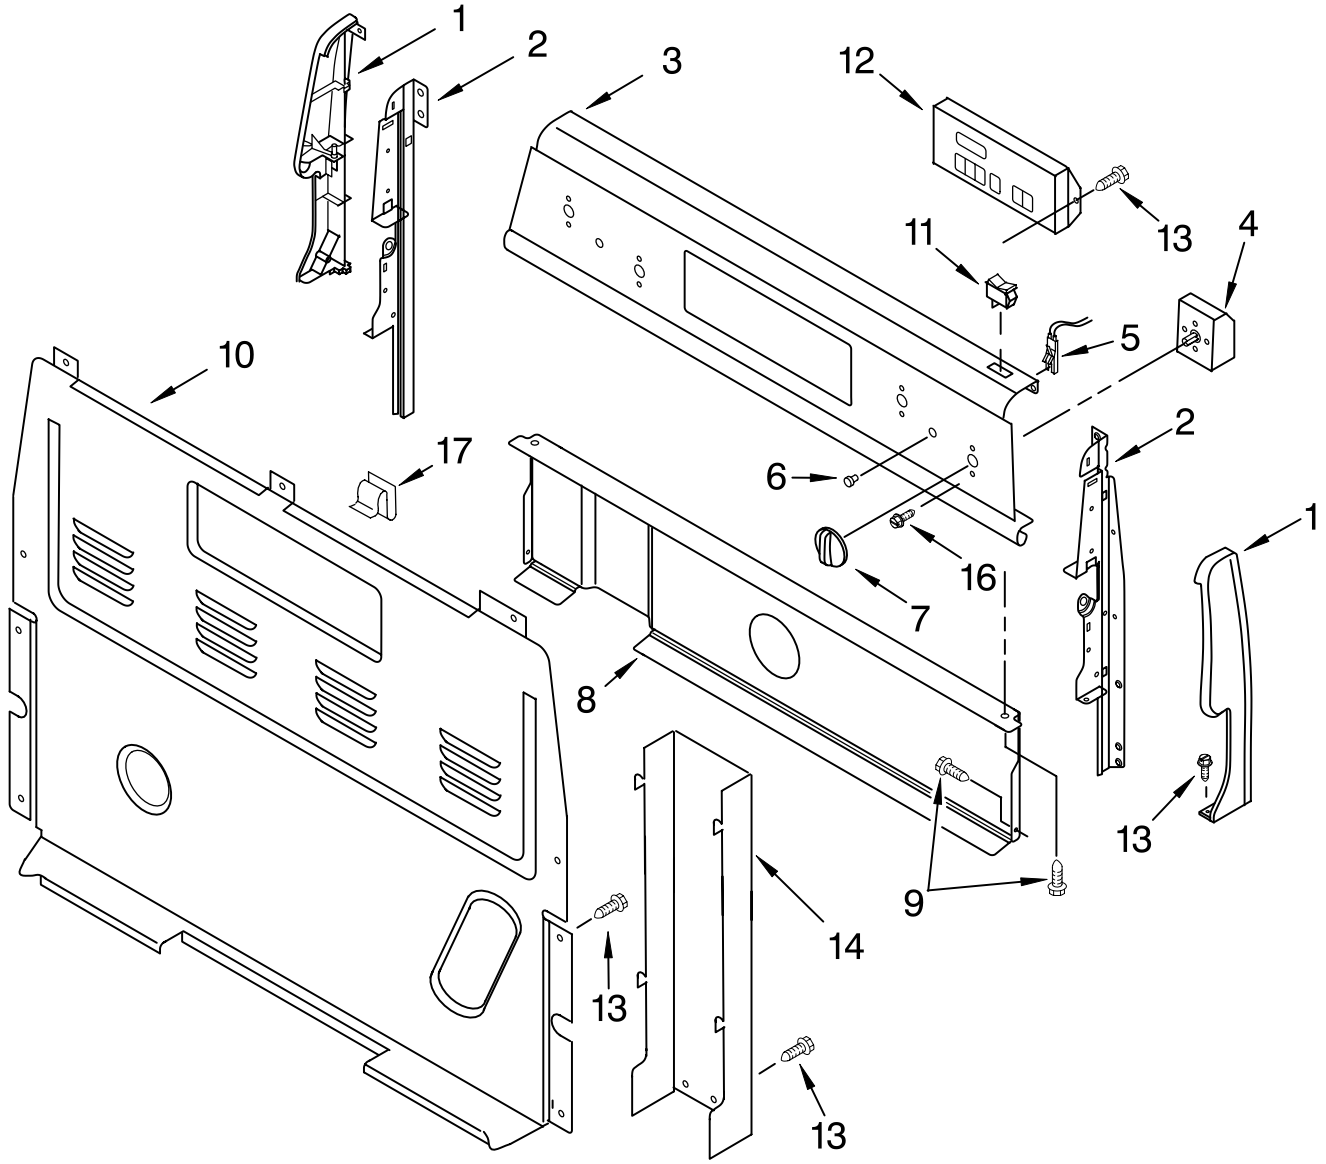

Illus. No.	Part No.	DESCRIPTION
1		Endcap
	3186188	Black Left
	3186189	Black Right
	3186190	White Left
	3186191	White Right
	8272507	Biscuit Left
	8272508	Biscuit Right
2		Support, Endcap
	3186198	Left Hand
	3186199	Right Hand
3		Panel, Backguard
	3186171	Black
	8273510	Biscuit
	3186173	White
4		Switch, Infinite
	3148954	Left Front
	3148951	Left Rear
	3148952	Right Rear
	3148951	Right Front
5	8273301	Light, Ind. (2)
6	3196068	Lens, Light (2)
7		Knob, Infinite (4)
	8522566	Black
	8522565	White
	8522567	Biscuit
8	8053911	Shield, Heat
9	4449746	Screw
10	8272473	Cover, Upper
11		Switch, Rocker
	3148564	Black
	3149360	White
	8273501	Biscuit
12		Control, Range
	6610313	Black
	6610312	White
	6610314	Biscuit
13	3196178	Screw
14	3195133	Cover, Box
16	3400882	Screw
17	8273564	Clip

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF368LXKW0, RF368LXKQ0, RF368LXKP0, RF368LXKT0, RF368LXKB0, RF368LXKV0
(White)(Designer White)(White on White)(Designer Biscuit)(Black) (Biscuit)

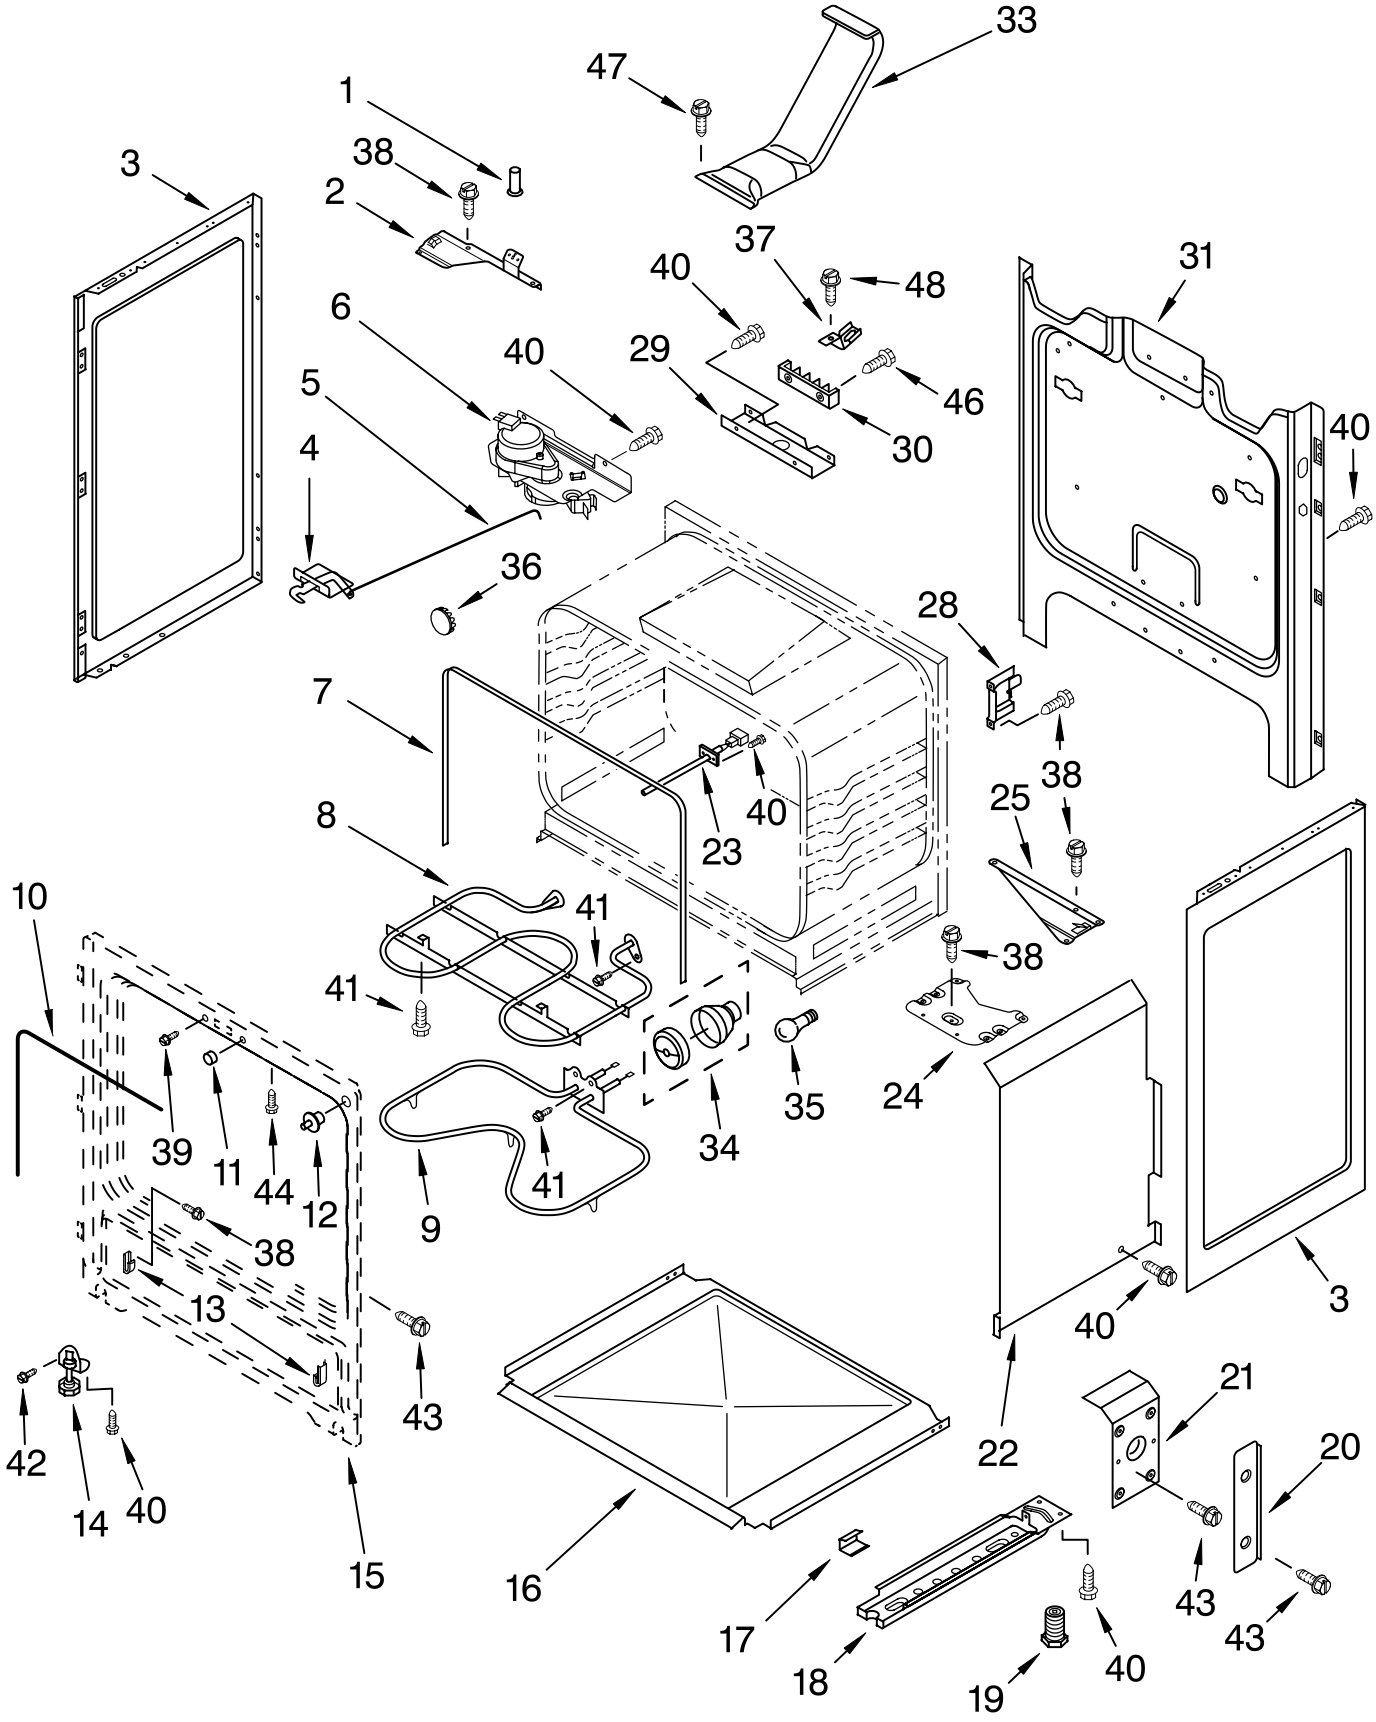

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF368LXKW0, RF368LXKQ0, RF368LXKP0, RF368LXKT0, RF368LXKB0, RF368LXKV0
(White)(Designer White)(White on White)(Designer Biscuit)(Black) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	3169110	Tube, Oven Vent
2	8273905	Support, Corner LR
3		Panel, Side (2)
	8053830	White−Textured
	8272519	Biscuit−Textured
	8053832	Black−Textured
4	3196119	Latch, Door
5	3196961	Rod, Latch
6	3196958	Latch Asy, Rear
7	3195737	Seal, Oven Flange
8	8053712	Element, Broil
9	8053713	Element, Bake
10	8522416	Seal, Oven Door
11	3196392	Spacer, Door
12	3195993	Switch, Door
13	3195546	Glide, Drawer (2)
14	3196037	Foot, Front (2)
15		Frame, Front (Non−Serviceable)
16	8054068	Tray, Insulation
17	3196576	Clip, Panel (6)
18	8053335	Rail, Base (2)
19	312701	Foot, Rear (2)
20	3196091	Shield, Outer (2)
21	3196092	Shield, Inner (2)
22	3195717	Retainer, Side (2)
23	8273902	Sensor, Oven
24	3195736	Support, Front (2)
25	3195987	Support, Corner RR
28	3186116	Support, Oven (2)
29	3186034	Bracket, Service
30	4449868	Block, Terminal
	112432	Nut (3)
31	8274034	Back, Main
33	8273561	Flue
34	3196701	Light Socket Assy
35	311255	Bulb, Oven Light
36	3196439	Plug, Button
37	3169573	Ground Strap
38	3196165	Screw
39	3196168	Screw
40	3196178	Screw
41	3196174	Screw
42	3196179	Screw
43	3196177	Screw
44	3196176	Screw
46	3400016	Screw
47	3196566	Screw
48	3196173	Screw, Ground

INSULATION

	8272616	Insulation, Wrap
	8272612	Insulation, Back
	8272613	Insulation, Vent

DRAWER & BROILER PARTS

For Models: RF368LXKW0, RF368LXKQ0, RF368LXKP0, RF368LXKT0, RF368LXKB0, RF368LXKV0
(White)(Designer White)(White on White)(Designer Biscuit)(Black) (Biscuit)

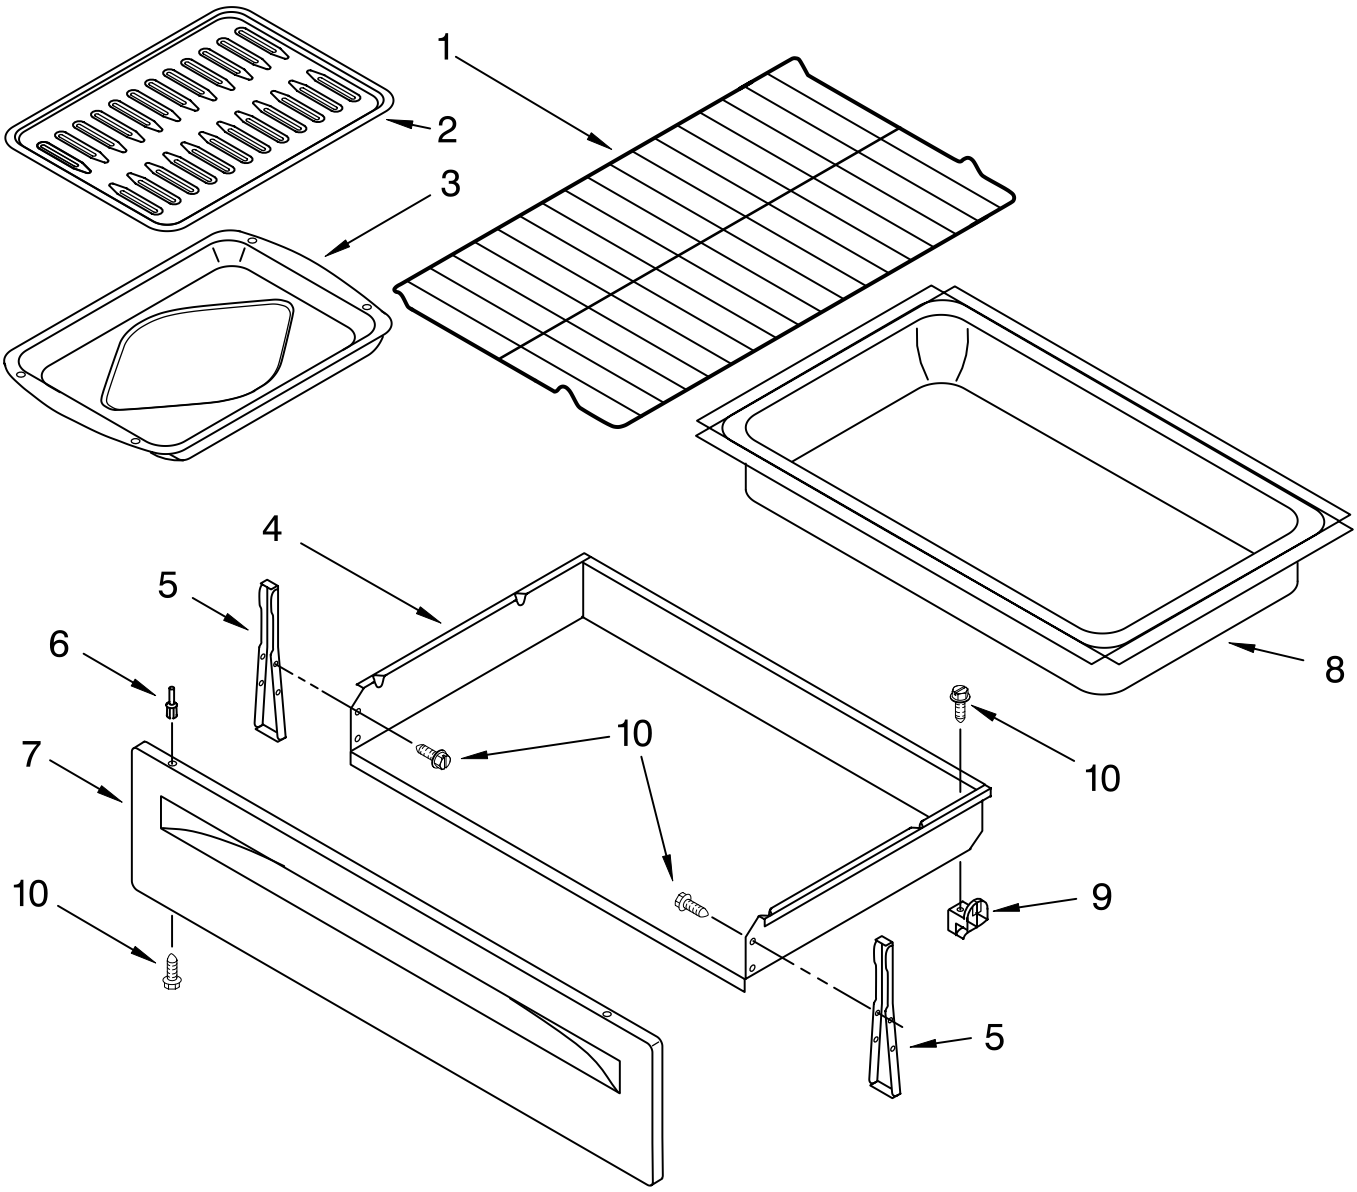

Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
2	3195996	Grill, Broiler
3	3196076	Pan, Broiler
4	8272605	Drawer, Storage
5	3196816	Bracket, Drawer(2)
6		Rivet, Push (2)
	3196814	White
	3196813	Black
	3196815	Biscuit
7		Panel, Drawer Frnt
	8053339	White
	8272501	Biscuit
	8053341	Black
8	8272311	Liner, Drawer
9	8053334	Glide, Drawer (2)
10	3196168	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: RF368LXKW0, RF368LXKQ0, RF368LXKP0, RF368LXKT0, RF368LXKB0, RF368LXKV0
(White)(Designer White)(White on White)(Designer Biscuit)(Black) (Biscuit)

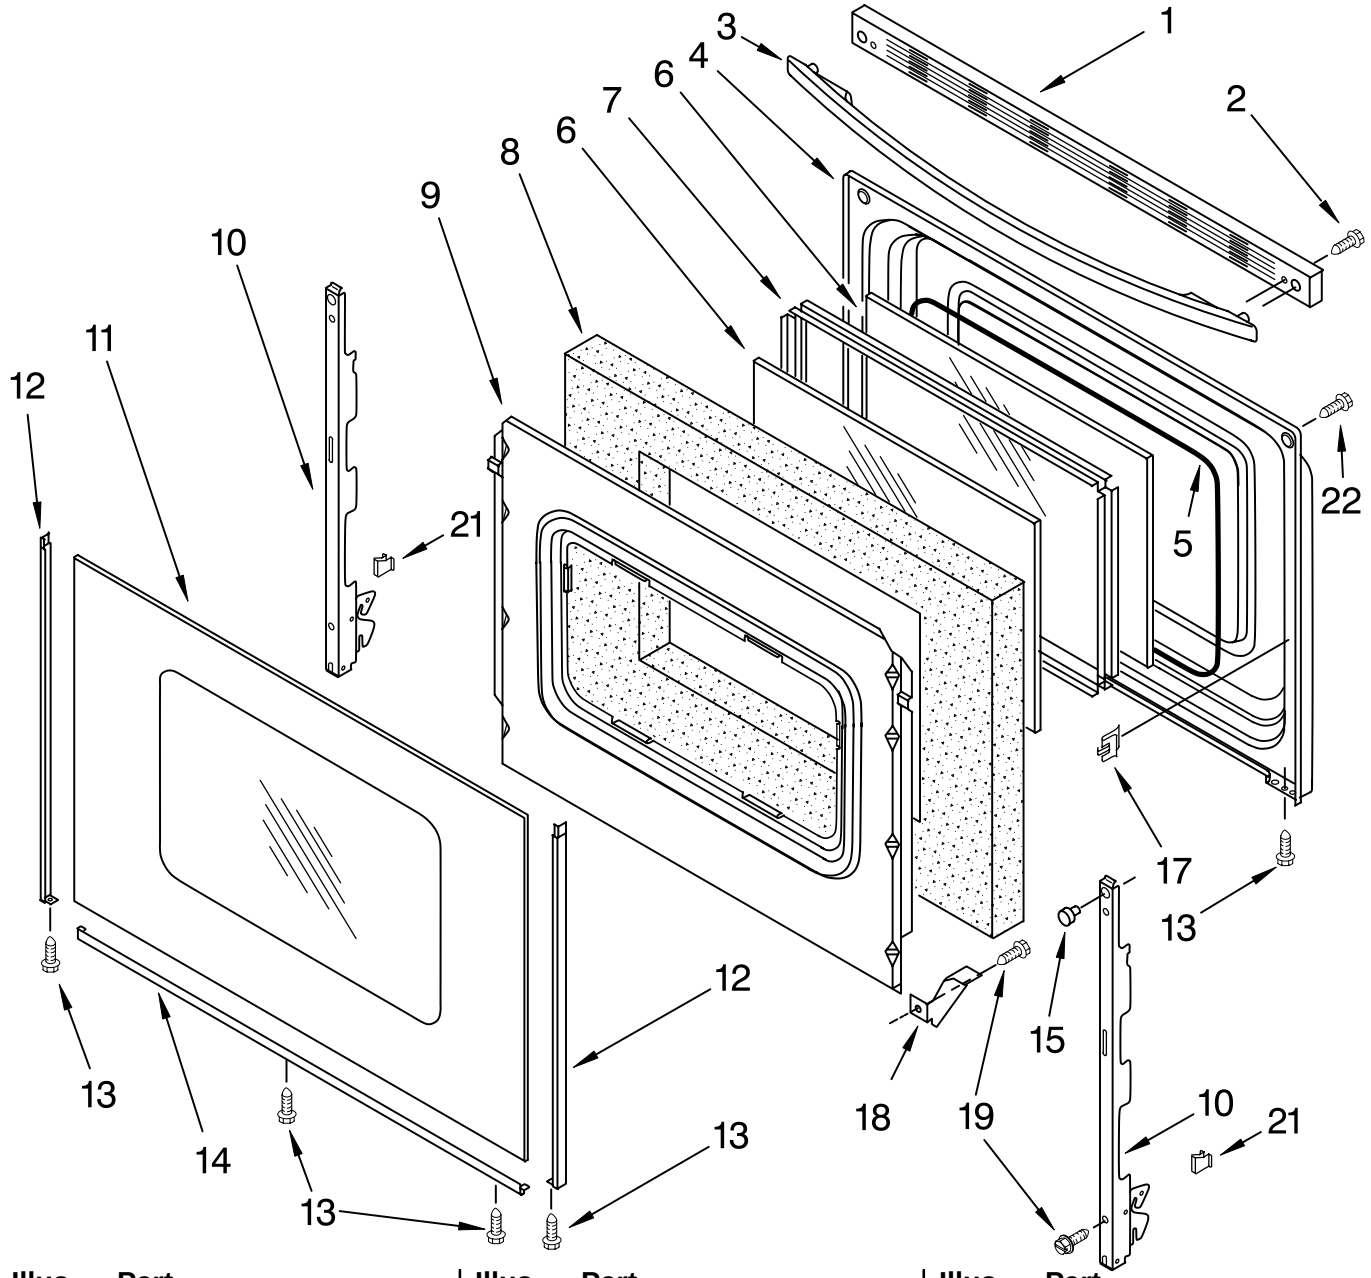

Illus. No.	Part No.	DESCRIPTION
1		Trim, Top
	3196819	Black
	8522434	Biscuit
	8522433	White
2	3196164	Screw
3		Handle, Door
	3195922	Black
	8522445	Biscuit
	8522444	White
4	3186292	Liner, Door
5	8522414	Seal, Window
6	8053948	Glass, Inner (2)
7	3186289	Frame, Glass
8	8272618	Insulation, Door
9	3186297	Trim, Door Side
10	8053807	Hinge, Door (2)
11		Glass, Outer Door
	8053478	Black
	8053480	White
	8272498	Biscuit
12		Trim, Side
	3195976	Black Left
	3195973	Black Right
	8522440	Biscuit Left
	8522437	Biscuit Right
	8522439	White Left
	8522436	White Right
13	3196160	Screw
14		Trim, Bottom
	3195424	Black
	8272499	Biscuit
	3195422	White
15	3195809	Bumper (2)
17	3196025	Clip, Door Glass
18	3196794	Bracket, Window(2)
19	3196165	Screw
21	3196925	Clip, Door Stop
22	3196161	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Models: RF368LXKW0, RF368LXKQ0, RF368LXKP0, RF368LXKT0, RF368LXKB0, RF368LXKV0
(White)(Designer White)(White on White)(Designer Biscuit)(Black) (Biscuit)

Illus. No.	Part No.	DESCRIPTION

Following Parts Not Illustrated

SPLICING WIRES−−25FT. LENGTH

242828	Wire, Black 12 Ga. 150° c
242820	Wire, Black 14 Ga. 150°c
242821	Wire, Blue 14 Ga. 150°c
242822	Wire, Brown 14 Ga. 150°c
242830	Wire, Brown 14 Ga. 200°c
242823	Wire, Green 14 Ga. 150°c
242824	Wire, Orange 14 Ga. 150°c
242829	Wire, Red 12 Ga. 150°c
242825	Wire, Red 14 Ga. 150°c
242831	Wire, Red 14 Ga. 200°c
242826	Wire, White 14 Ga. 150°c
242827	Wire, Yellow 14 Ga. 150°c
242832	Wire, Yellow 14 Ga. 200°c

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch−Up Self−Clean(1/2 Pt)
261582	Grease

INSULATION

261514	Insulation, Fiberglass (1−1/2" x 24" x 120")
240132	Insulation, Fiberglass (2−1/2" x 22" x 120")

PAINT, TOUCH−UP (1/2oz.)

72017	White
72107	Almond
511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
350956	Almond
285006	Superior Black
206922	Primer (White)

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)

ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
3191048	Cleaner, Glass

ANTI−TIP KIT

3176830	Anti−Tip Kit

WIRING HARNESS PARTS

8272999	Harness, Wire (Cooktop)
3196520	Clip, Wire Harness
8273304	Harness, Wire (Rocker)
8523161	Harness, Wire (Door Switch)
8273305	Harness, Wire (Oven Light)
311227	Wire, Ground
313660	Clip, Ground Wire
3196696	Clip
3196173	Screw
3196154	Screw, Ground

Miscellaneous

814381	Pin Kit−Dr Removal